

GENERAL NOTES

THESE INSTALLATION INSTRUCTIONS ARE A SUPPLEMENT TO THE APPROVED SHOP DRAWINGS. USE IN CONJUNCTION WITH THOSE DRAWINGS.

1 - HANDLING, STORING AND PROTECTING ALUMINUM MATERIAL.

THE FOLLOWING PRECAUTIONS ARE RECOMMENDED TO ASSURE EARLY ACCEPTANCE OF YOUR PRODUCTS AND WORKMANSHIP.

A - HANDLE CAREFULLY - DO NOT DROP FROM THE TRUCK. STACK WITH ADEQUATE SEPARATION SO MATERIAL WILL NOT RUB TOGETHER. STORE OFF THE GROUND. PROTECT AGAINST ELEMENTS AND OTHER CONSTRUCTION TRADES.

B - KEEP MATERIAL AWAY FROM WATER, MUD AND SPRAY - PREVENT CEMENT, PLASTER AND OTHER MATERIALS FROM DAMAGING THE FINISH.

C - PROTECT THE MATERIALS AFTER ERECTION, BY WRAPPING WITH KRAFT PAPER - OR BY ERECTING VISQUEEN/CANVAS SPLATTER SCREENS. CEMENT, PLASTER, TERRAZZO AND OTHER ALKALINE MATERIALS ARE VERY HARMFUL TO THE FINISH AND SHOULD BE REMOVED WITH WATER AND MILD SOAP BEFORE SETTING OCCURS. UNDER NO CIRCUMSTANCES ALLOW THESE MATERIALS TO TO DRY OR PERMANENT STAINING WILL OCCUR.

2 - GENERAL RULES

THE FOLLOWING PRACTICES ARE RECOMMENDED FOR ALL WALL INSTALLATIONS.

A - READ COMPLETE INSTRUCTIONS BEFORE ORDERING GLASS OR FABRICATING MATERIAL.

B - CHECK SHOP DRAWINGS TO BECOME THOROUGHLY FAMILIAR WITH THE JOB.

C - ALL MATERIALS ARE TO BE INSTALLED PLUMB, LEVEL AND TRUE.

D - ALL WORK SHOULD START FROM ESTABLISHED BENCH MARKS AND COLUMN CENTER LINES ESTABLISHED BY THE ARCHITECTURAL DRAWINGS AND THE GENERAL CONTRACTOR.

E - THE SEQUENCE OF ERECTION SHOULD BE COORDINATED WITH THE JOB SUPERINTENDENT SO DELAYS ARE PREVENTED AND RISK OF MATERIAL DAMAGE IS MINIMIZED. IF PRESETTING OF ANCHORAGE IS REQUIRED, COORDINATE WITH GENERAL CONTRACTOR AND SUPERVISE LOCATION.

F - MAKE CERTAIN CONSTRUCTION WHICH WILL RECEIVE YOUR MATERIALS IS ACCORDING TO THE CONTRACT DOCUMENTS. IF NOT, NOTIFY THE GENERAL CONTRACTOR IN WRITING AND RESOLVE DIFFERENCES BEFORE PROCEEDING WITH YOUR WORK.

G - INSULATE ALL ALUMINUM TO BE PLACED DIRECTLY IN CONTACT WITH THE MASONRY OR INCOMPATIBLE MATERIALS WITH A HEAVY COAT OF ZINC CHROMATE OR BITUMINOUS PAINT.

H - FOLLOW KAWNEER INSTALLATION AND GLAZING INSTRUCTIONS.

J - CHECK ALL MATERIAL ON ARRIVAL FOR QUANTITY.

K - BE SURE TO HAVE ALL THE MATERIALS AND TOOLS NEEDED TO BEGIN THE INSTALLATION.

- 1 - APPROVED SHOP DRAWINGS
- 2 - LEVEL AND PLUMB (TRANSIT)
- 3 - FASTENERS AND REQUIRED DRIVERS.
- 4 - PERIMETERS AND ACCESSORIES SUCH AS ANCHORS, FASTENERS, SLEEVES AND/OR SPLICE CAPS.
- 5 - SEALING MATERIALS.
- 6 - GLAZING MATERIALS.

L - FOLLOW SEALANT MANUFACTURER'S RECOMMENDATIONS FOR PROPER SEALANT AND APPLICATION. ALL SEALANTS AND MASTICS MUST BE COMPATIBLE WITH ALL SURFACES INCLUDING OTHER SEALANT SURFACES. WHERE REQUIRED ALL SEALANTS MUST ADHERE TO ALL SURFACES INCLUDING OTHER SEALANT SURFACES.

1600 SYSTEM¹ NOTES

1600 SYSTEM¹ IS AVAILABLE WITH 1" FRAMING MEMBERS WHICH ACCEPT BOTH 1" AND 1/4" INFILLS. ALSO 1/4" FRAMING MEMBERS WHICH ACCEPT 1/4" INFILLS ONLY ARE AVAILABLE.

GLASS BITE IS 1/2" AT VERTICALS AND HORIZONTALS. GLASS SIZES MUST BE CALCULATED FROM APPROVED SHOP DRAWINGS.

UNLESS OTHERWISE SPECIFIED, IT IS RECOMMENDED THAT SILICONE SEALANT BE USED FOR ALL INTERNAL SEALS.


SEALANT MUST BE APPLIED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS AND PASS ALL ADHESION AND COMPATIBILITY TESTING. AT ALL JOINT SEALS, SEALANT MUST ADHERE TO METAL, GASKETS, THERMAL SEPARATOR AND JOINT PLUG MATERIALS. CLEAN ALL SURFACES PRIOR TO APPLICATION OF SEALANT AND PRIME WHERE NECESSARY TO ACHIEVE PROPER ADHESION.

OPEN BACK HORIZONTAL NOTES

THE OPEN BACK HORIZONTAL IS TO BE TYPICALLY USED FOR ALL HEAD/SILL AND LAST BAY INTERMEDIATE HORIZONTALS.

THE OPEN BACK HORIZONTAL CAN BE USED AT OTHER CONDITIONS IF IT IS AN ADVANTAGE TO THE JOB DESIGN.

THE SHEAR BLOCK AT ALL OPEN BACK INTERMEDIATE HORIZONTALS HAS THE OPTION TO BE PRE-INSTALLED INTO THE HORIZONTAL BEFORE HORIZONTALS ARE INSTALLED

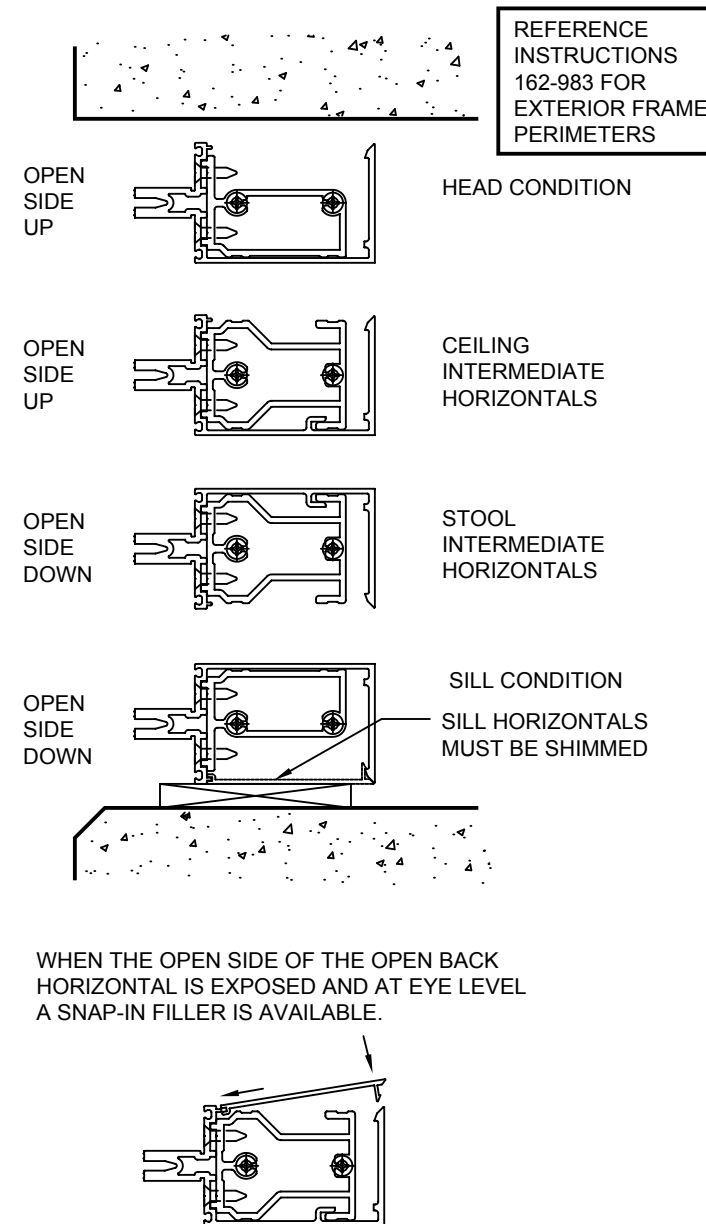


WHEN THE SNAP-IN FILLER IS NOT USED, AND DUE TO STANDARD COMMERCIAL EXTRUDING TOLERANCES, IT MAY BE REQUIRED TO USE A 4" PIECE OF THE FILLER AT EACH END OF A HORIZONTAL.

USE PART 162-316 FOR THE 6" DEEP SYSTEM
USE PART 162-317 FOR THE 7 1/2" DEEP SYSTEM


OPEN BACK HORIZONTALS AT 90° AND 135° CORNERS

WHENEVER POSSIBLE AVOID USING OPEN BACK HORIZONTALS AT 90° AND 135° CORNERS. IF USING THE OPEN BACK HORIZONTAL BECOMES ABSOLUTELY NECESSARY THE SHEAR BLOCK CONNECTION WILL BE AS SHOWN BELOW.

ALSO REFER TO CORNER INSTRUCTIONS 162-972

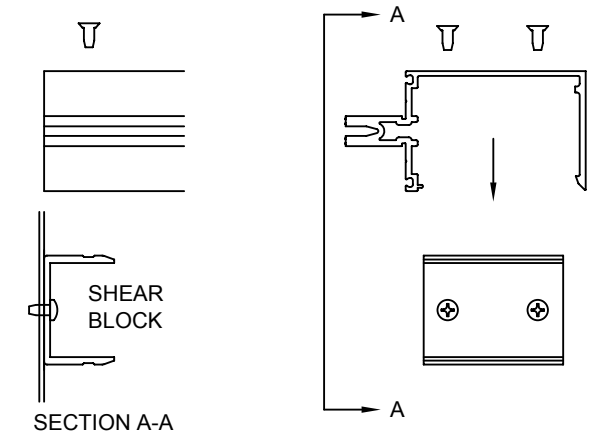

THE OPEN SIDE OF THE OPEN BACK HORIZONTAL IS TO BE POSITIONED AS SHOWN BELOW. THE INTERMEDIATE HORIZONTAL IS POSITIONED OPEN SIDE DOWN FOR DEAD LOAD SUPPORT.

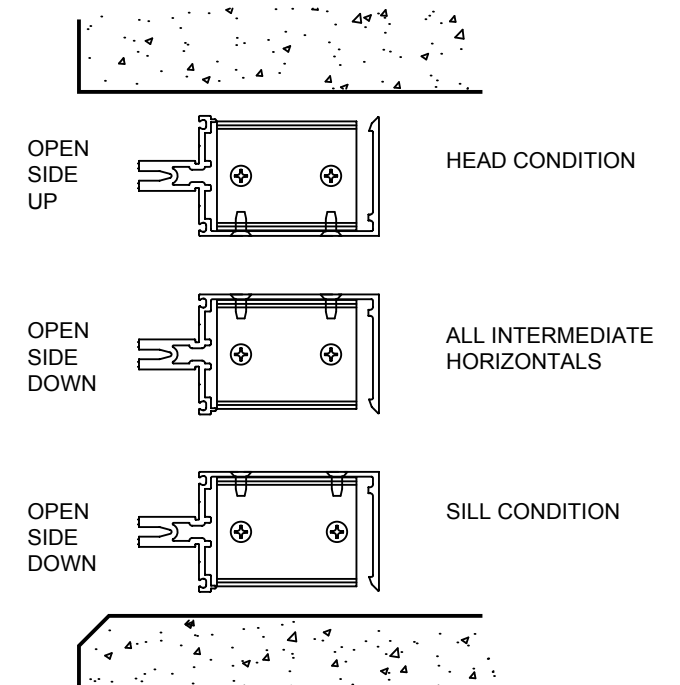

1600 SYSTEM¹
INSTALLATION INSTRUCTIONS

PART NUMBER
162-970 1 OF 9

95449-68
08/17/07

DRAWING:

ORDER:

SHT:

STEP - 1 CHECK OPENINGS


ELEVATIONS AND SLABS MUST BE WITHIN ADJUSTMENT OF ANCHORING SYSTEM. SEE APPROVED SHOP DRAWINGS FOR ALLOWABLE ADJUSTMENT.

ANCHORING SURFACES OF PERIMETER CONSTRUCTION MUST BE LEVEL AND PLUMB WITHIN THE ADJUSTMENT LIMITS OF THE HEAD, SILL AND JAMB. SEE APPROVED SHOP DRAWINGS FOR ALLOWABLE ADJUSTMENT.

STEP - 2 LAY OUT ANCHOR AND MULLION CENTERLINES

USE WALL LINES ESTABLISHED BY THE GENERAL CONTRACTOR. ON EACH FLOOR LAY OUT A REFERENCE LINE TO ESTABLISH IN AND OUT WALL LOCATIONS.

USE COLUMN CENTER LINES ESTABLISHED BY THE GENERAL CONTRACTOR. ON EACH FLOOR LAY OUT MULLION CENTER LINES AND ANCHOR CENTER LINES.

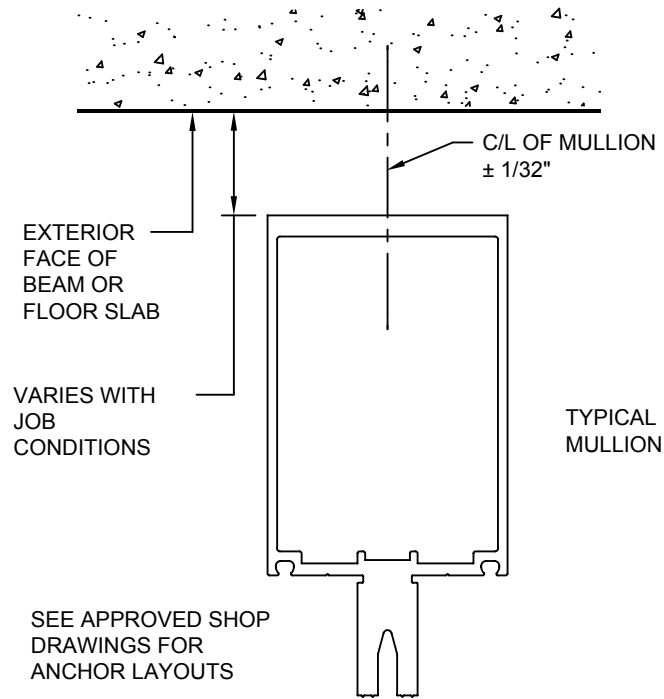

STEP - 3 INSTALL PRESET ANCHORS IF APPLICABLE

USING LOCATION LINES PREVIOUSLY ESTABLISHED INSTALL PRESET ANCHORS IN PLACE PER APPROVED SHOP DRAWINGS.


STEP - 4 FRAME ASSEMBLY

ATTACH ANCHORS TO MULLIONS WHERE APPLICABLE.

ANCHOR PREP MAY BE FABRICATED IN THE FIELD OR FACTORY. CONSULT APPROVED SHOP DRAWINGS FOR CORRECT METHOD.



STANDARD ANCHOR PREP IS THRU-BOLTED AT INTERMEDIATE VERTICALS AND TAPPING PLATES ARE USED AT JAMB VERTICALS. REFER TO APPROVED SHOP DRAWINGS FOR CORRECT METHOD.

WHEN WELDING ANCHORS, PROTECT INSTALLED GLASS AND METAL FROM WELD SPLATTER.

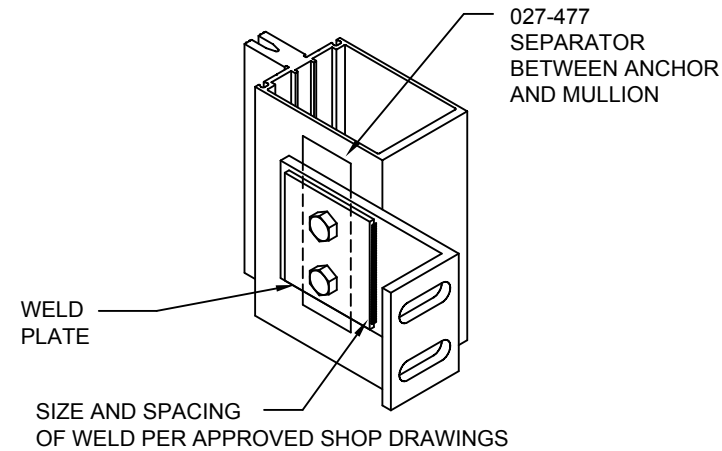

DO NOT OVER TIGHTEN ANCHOR CONNECTIONS. TIGHTEN TO A "SNUG TIGHT" POSITION WITH PARTS BROUGHT INTO GOOD CONTACT. BE SURE ANY SPRING TYPE LOCK WASHERS ARE COMPRESSED. THEN TIGHTEN APPROXIMATELY 1/2 MORE TURN.


ATTACH SHEAR BLOCKS.

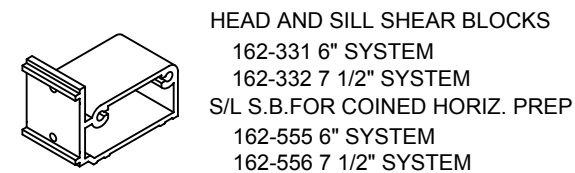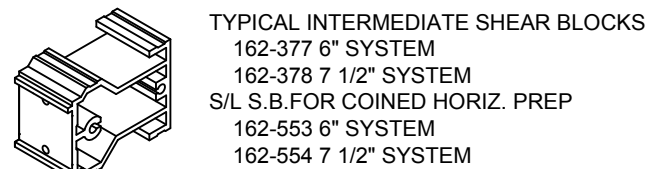

REFERENCE INSTRUCTIONS 162-983 FOR EXTERIOR FRAME PERIMETERS
 HEAD AND SILL SHEAR BLOCKS
 162-384 6" SYSTEM
 162-385 7 1/2" SYSTEM

STEP - 4 FRAME ASSEMBLY


ATTACH SHEAR BLOCKS.

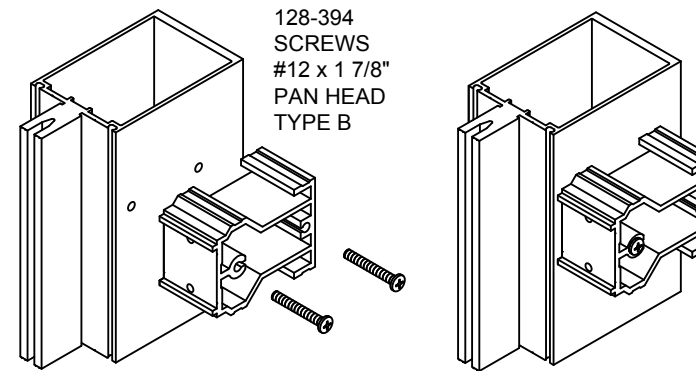

HEAD/SILL SHEAR BLOCK/ANCHOR WHERE APPLICABLE AND SHOWN BELOW.

- 162-314 6" SYSTEM AT JAMBS
- 162-315 7 1/2" SYSTEM AT JAMBS
- 162-342 6" SYSTEM AT MULLIONS
- 162-343 7 1/2" SYSTEM AT MULLIONS

STRUCTURAL INTEGRITY OF ANCHOR AND FASTENERS MUST BE CHECKED BY FACTORY ENGINEERS.

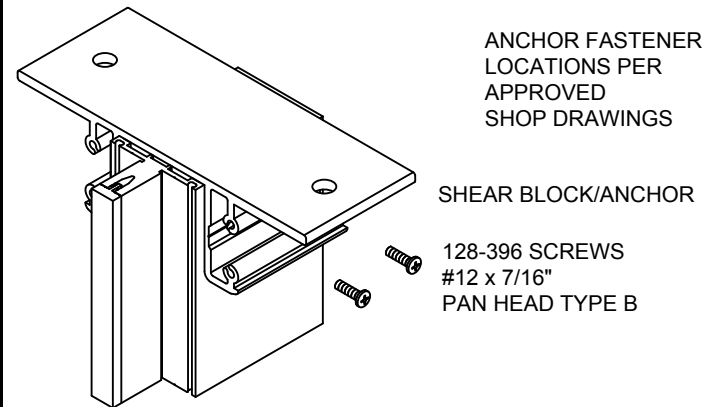


STEP - 5 INSTALL 162-310 THERMAL BREAK




DO NOT STRETCH WHEN REMOVING FROM COIL AND CARTON

DO NOT STRETCH DURING INSTALLATION

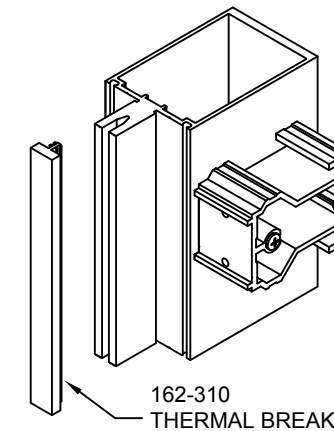


STEP - 5 INSTALL 162-310 THERMAL BREAK

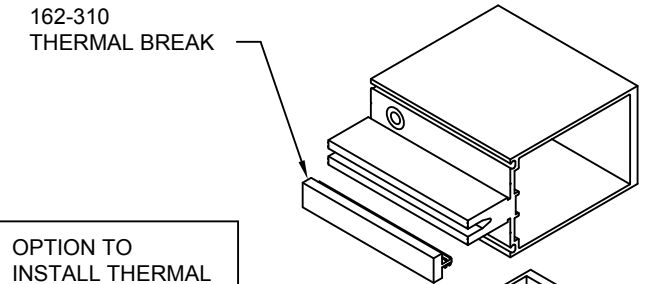


OPTION TO INSTALL THERMAL BREAK AFTER VERTICALS AND HORIZONTALS ARE INSTALLED

THERMAL BREAK TO BE SAME LENGTH AS VERTICAL MULLIONS

THERMAL BREAK TO BE 1/4" SHORT AT EACH END OF HORIZONTALS

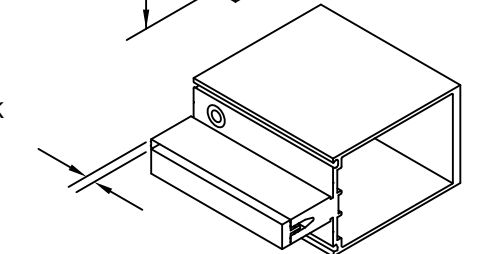


INSTALL HEAD AND SILL END CAPS
 162-388 1" FRAMING
 162-389 1/4" FRAMING
 SET IN SEALANT

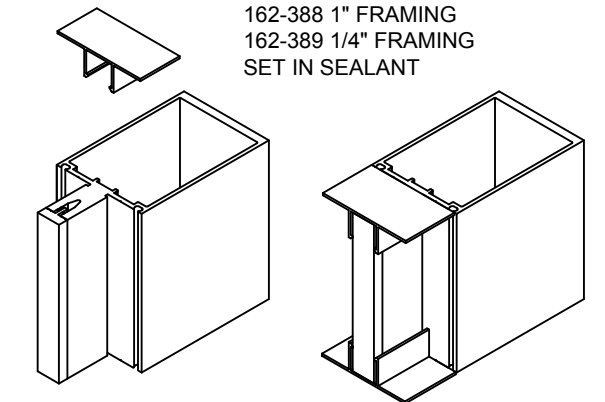

NOT REQUIRED AT EXTERIOR FRAME PERIMETERS SHOWN IN INSTRUCTIONS 162-983 AND AT OPTIONAL PERIMETER FILLERS 162-022 AND 162-023.

STEP - 6 PERIMETERS WHERE APPLICABLE

INSTALL PERIMETER MEMBERS PER APPROVED SHOP DRAWINGS. PERIMETER MEMBERS CAN OCCUR AT HEAD, SILL OR JAMB CONDITIONS.

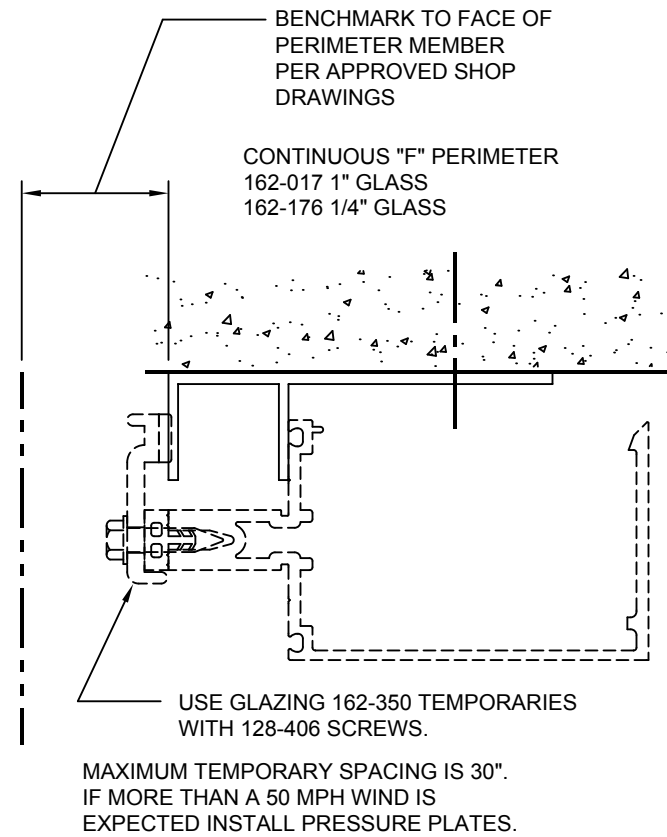

STEP - 7 INSTALL VERTICAL MULLIONS

"F" OR "T" ANCHORS WHERE APPLICABLE




"F" AND "T" ANCHOR FASTENER LOCATIONS PER APPROVED SHOP DRAWINGS

REFERENCE INSTRUCTIONS 162-983 FOR EXTERIOR FRAME PERIMETERS

THESE SHEAR BLOCKS MAY NEED TO BE REMOVED TO INSTALL AN ANCHOR FASTENER THAT MIGHT BE LOCATED CLOSE TO THE MULLION

"F" AND "T" ANCHOR FASTENER LOCATIONS PER APPROVED SHOP DRAWINGS

AT MULLION JAMB SIDE, APPLY (2) 128-396 SCREWS AS SHOWN TO CENTER F-CLIPS AS REQUIRED.

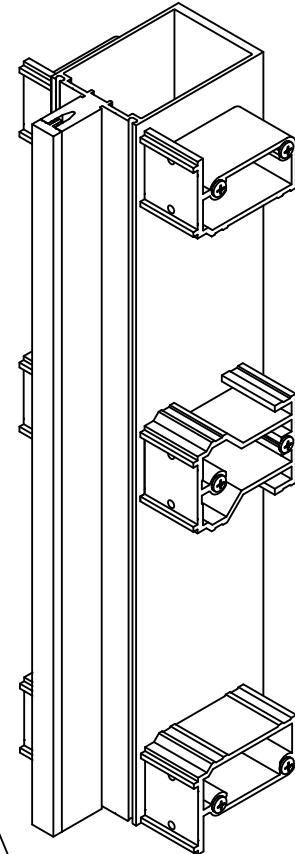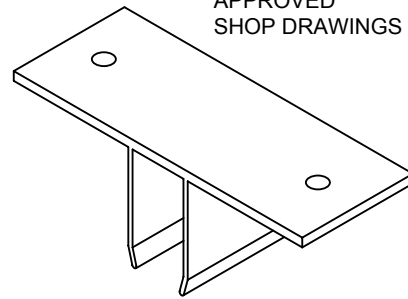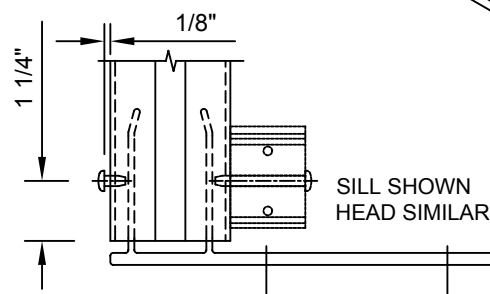


STEP - 7 INSTALL VERTICAL MULLIONS


HEAD/SILL SHEAR BLOCK/ANCHOR WHERE APPLICABLE.

CAN NOT BE USED WITH EXTERIOR FRAME PERIMETERS SHOWN ON INSTRUCTIONS 162-983

162-314 6" SYSTEM AT JAMBS
162-315 7 1/2" SYSTEM AT JAMBS
162-342 6" SYSTEM AT MULLIONS
162-343 7 1/2" SYSTEM AT MULLIONS

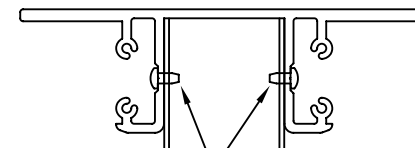

128-396 SCREWS
#12 x 7/16"
PAN HEAD TYPE B

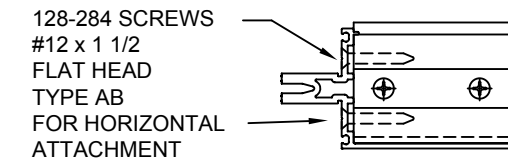


128-284 SCREWS
#12 x 1 1/2"
FLAT HEAD
TYPE AB
FOR HORIZONTAL
ATTACHMENT

THE ABOVE SCREWS ARE ONLY USED AT THE OPTIONAL SHEAR BLOCK/ANCHORS.

STRUCTURAL SHIMMING IS REQUIRED AT SILL TO ACCOMPLISH DESIGNED PERIMETER SEAL WIDTH.


ANCHOR FASTENER LOCATIONS PER APPROVED SHOP DRAWINGS

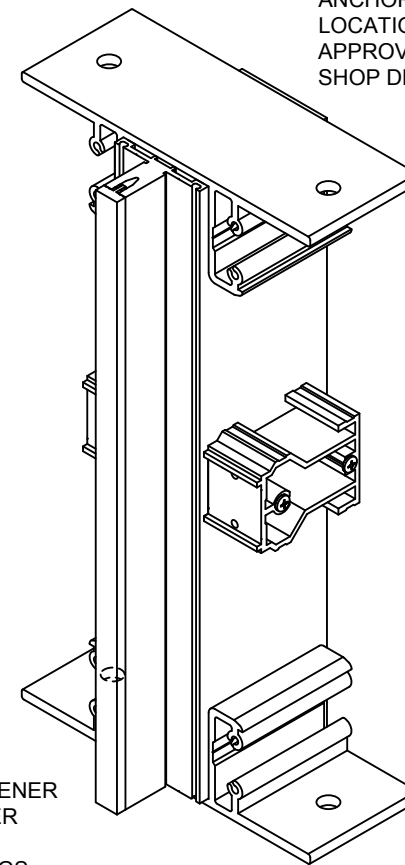


ANCHOR FASTENER LOCATIONS PER APPROVED SHOP DRAWINGS

STEP - 7 INSTALL VERTICAL MULLIONS

VERTICAL SPLICE JOINTS WHERE APPLICABLE.

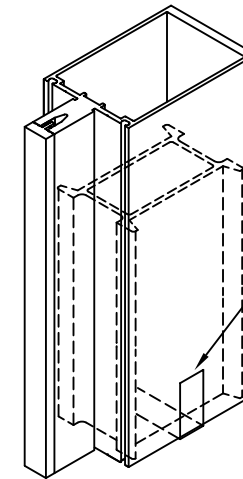

SLEEVE IS FACTORY TAPPED INTO THE BOTTOM OF THE TOP VERTICAL.

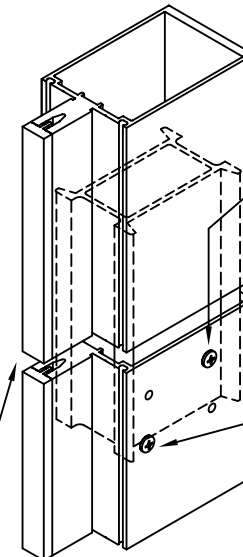


REMOVE THE TAPE AND LET THE SLEEVE SLIDE DOWN TO THE FACTORY APPLIED STOP SCREW

FIELD APPLIED FIXING SCREW 128-348 #10 x 1 1/4" FLAT HEAD SELF DRILLING.

SHOP APPLIED STOP SCREW 128-267 #12 x 1" PAN HEAD TYPE AB

USE TEMPORARY SPACERS FOR JOINT DIMENSION

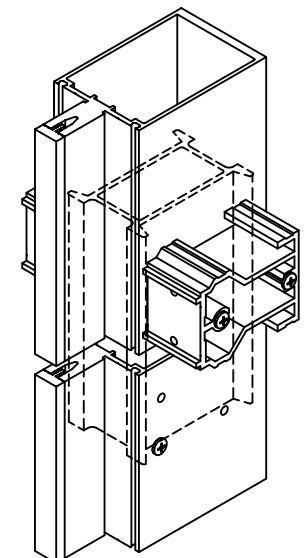


SPLICE JOINT WHEN IT OCCURS AT A HORIZONTAL.

STEP - 7 INSTALL VERTICAL MULLIONS

DIMENSION BUILD-UP CHECK

CHECK OVERALL FRAME DIMENSIONS ABOUT EVERY FIVE MULLIONS ON LONG RUNS. THIS IS TO AVOID DIMENSION BUILD-UP.

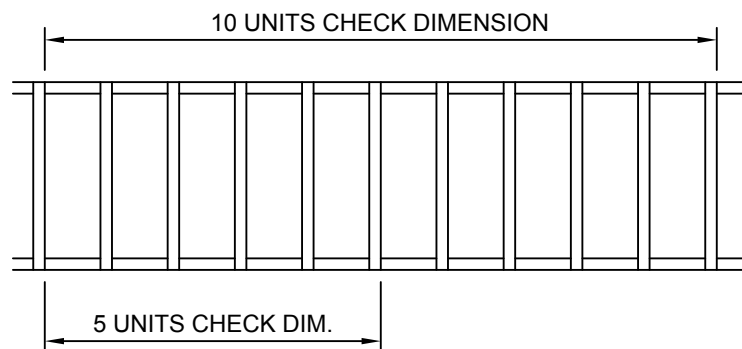

1600 SYSTEM¹
INSTALLATION INSTRUCTIONS

PART NO.
162-970 3 OF 9

95449-68
08/17/07

DRAWING:


ORDER:

SHT:


STEP - 8 INSTALL HEAD/SILL AND INTERMEDIATE HORIZONTALS

TUBULAR HORIZONTALS

128-405 SCREWS
#12 X 7/8" FLAT HEAD
TYPE AB

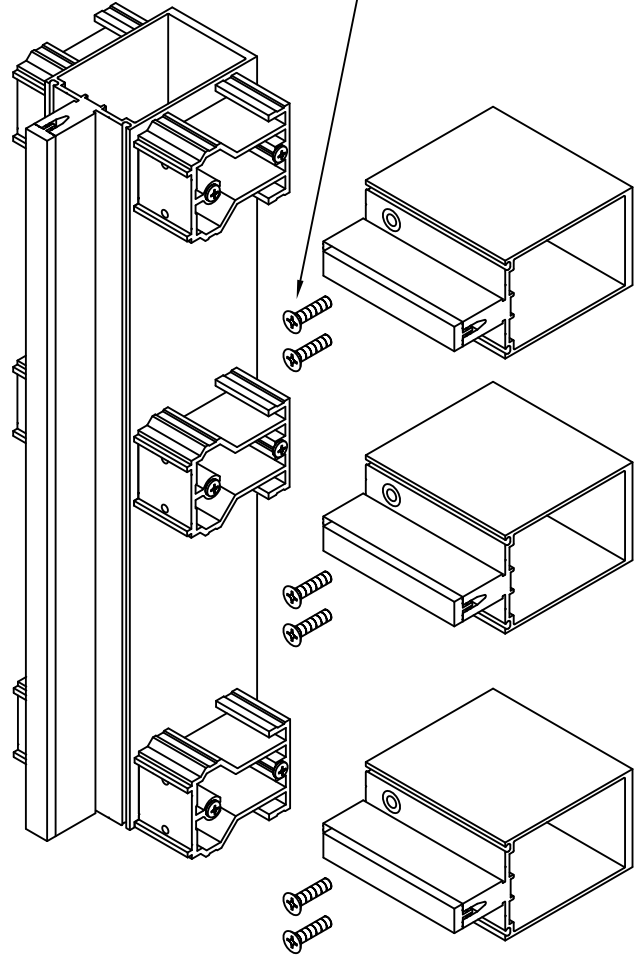

THERMAL BREAK
TO BE 1/4"
SHORT AT EACH
END OF
HORIZONTALS

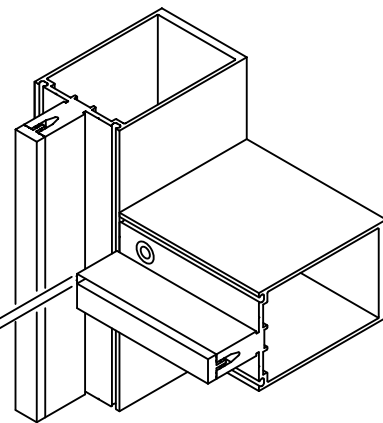


STEP - 8 INSTALL HEAD/SILL AND INTERMEDIATE HORIZONTALS


REFERENCE INSTRUCTIONS 162-983 FOR
EXTERIOR FRAME PERIMETERS

OPEN BACK HORIZONTALS AND LAST BAY
HORIZONTALS.
FILLER AVAILABLE WHEN OPEN BACK IS
EXPOSED AND AT EYE LEVEL.


128-405 SCREWS
#12 X 7/8" FLAT HEAD
TYPE AB

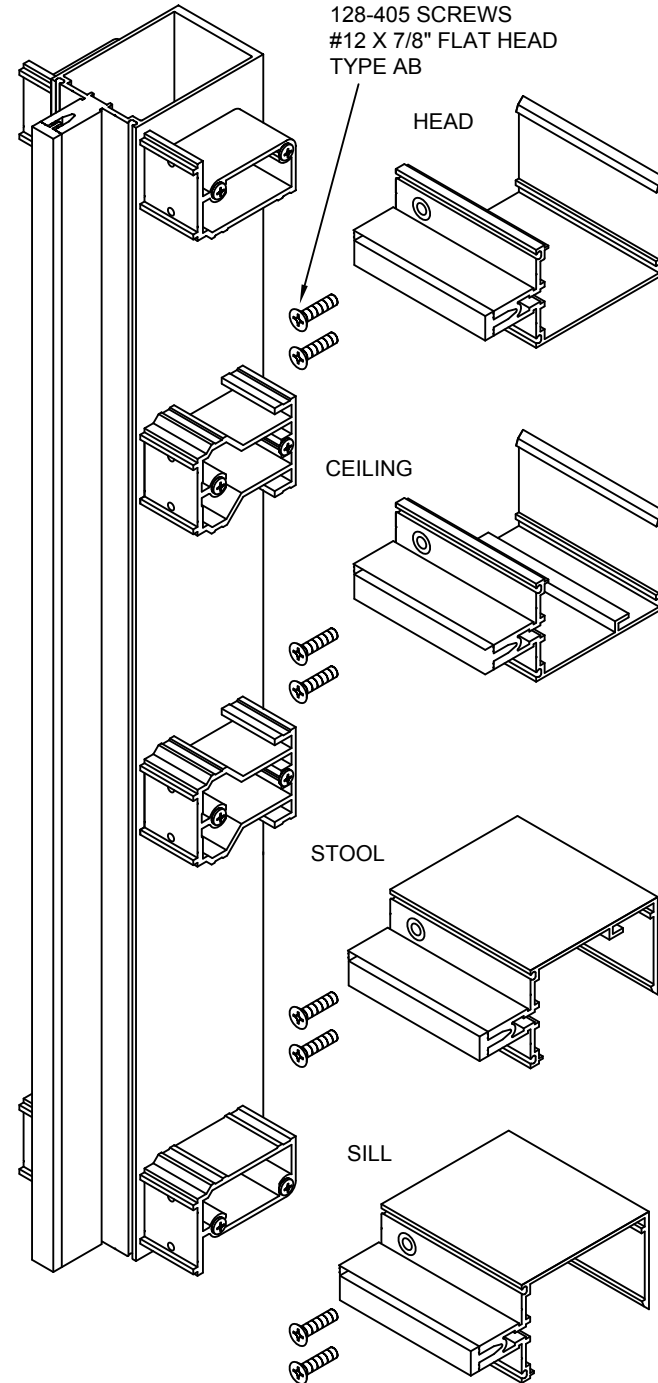

INSTALLING CEILING INTERMEDIATE
OPEN BACK HORIZONTAL

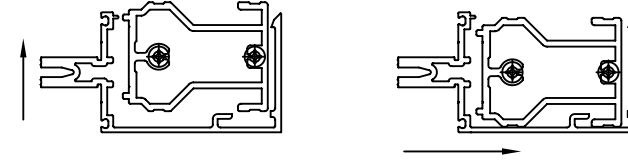





INSTALLING STOOL INTERMEDIATE
OPEN BACK HORIZONTAL

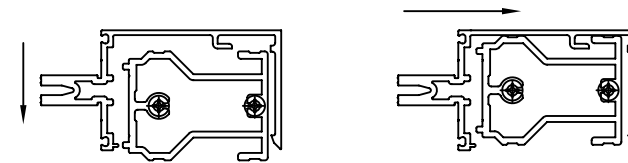


STEP - 9 INSTALL JOINT PLUGS

ALL SURFACES AND GROOVES MUST BE
CLEANED PER THE SEALANT MANUFACTURER'S
RECOMMENDATIONS.

JUST BEFORE INSTALLING JOINT PLUGS
APPLY SEALANT AS SHOWN FILLING
GASKET POCKET AND ADAPTER GROOVE.

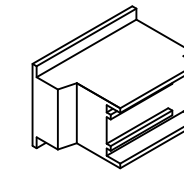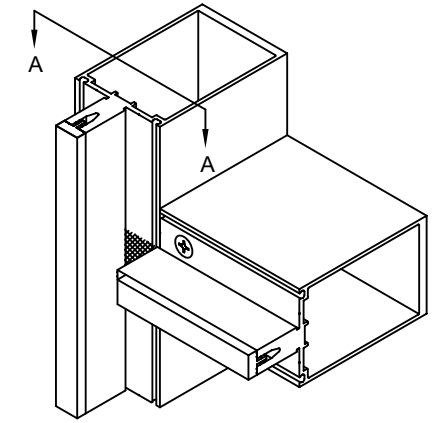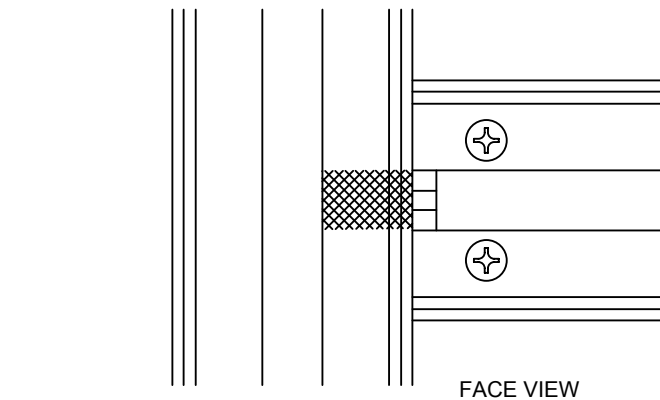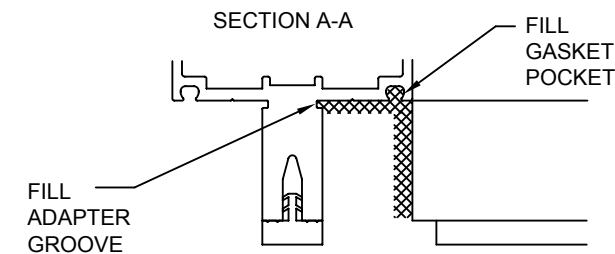

JOINT PLUG
162-321 1" FRAMING
162-322 1/4" FRAME MEMBERS

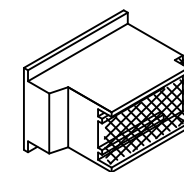

APPLY SEALANT TO THIS
FACE OF JOINT PLUG

SEAL AROUND
JOINT PLUG
EDGES
TOOL SEALANT



SEAL AROUND
JOINT PLUG
EDGES
TOOL SEALANT

REFERENCE INSTRUCTIONS 162-983 FOR
EXTERIOR FRAME PERIMETERS



1600 SYSTEM¹
INSTALLATION INSTRUCTIONS

PART NO.
162-970 4 OF 9


95449-68
08/17/07

DRAWING:



ORDER:

SHT:

STEP - 10 INSTALL PERIMETER
FILLERS AND
SPANDREL ADAPTERS
WHERE APPLICABLE


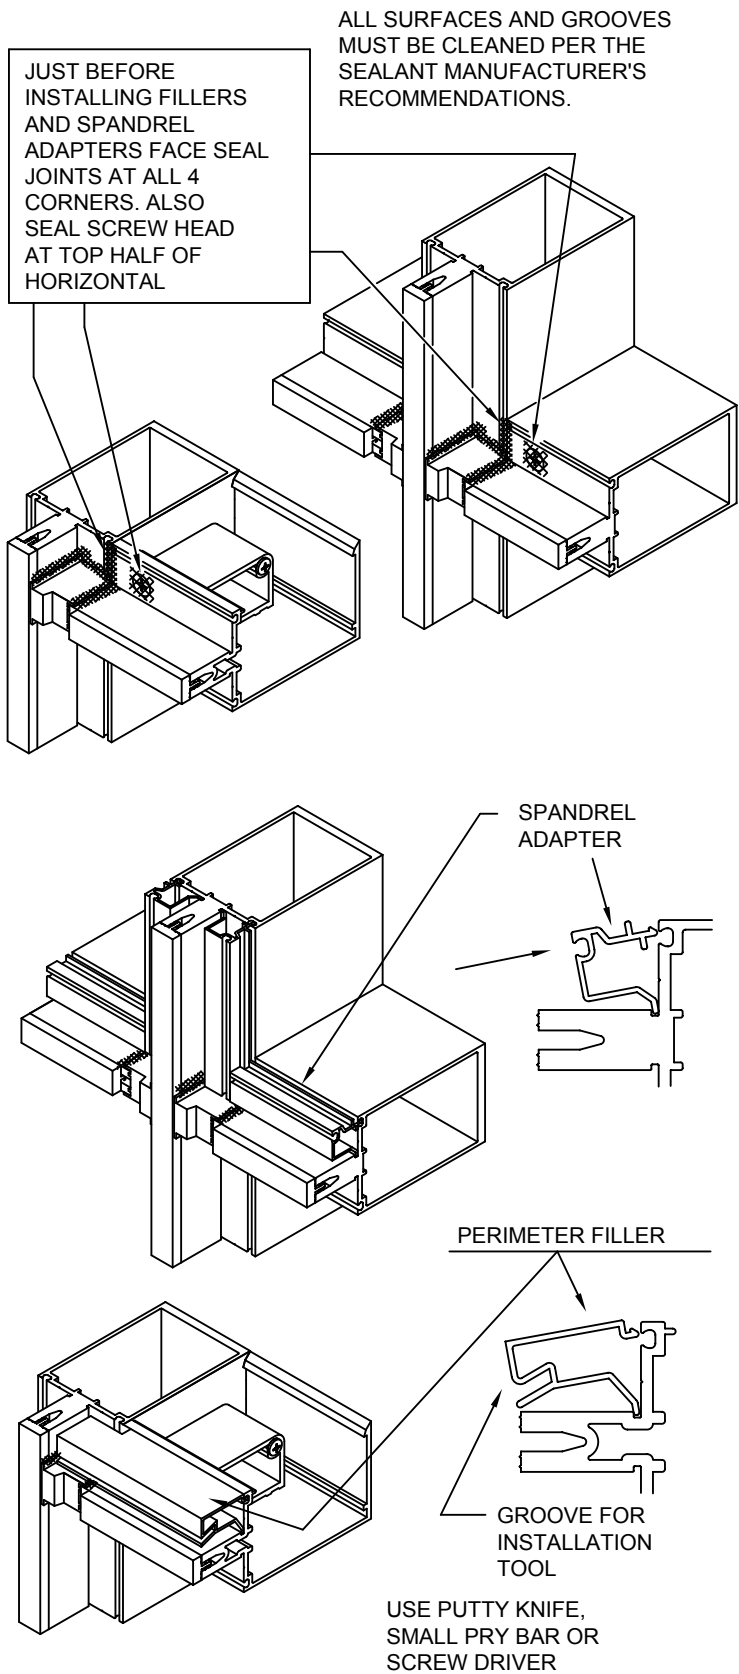


STEP - 11 SEAL INTERIOR OF
VERTICAL SPLICE
JOINTS

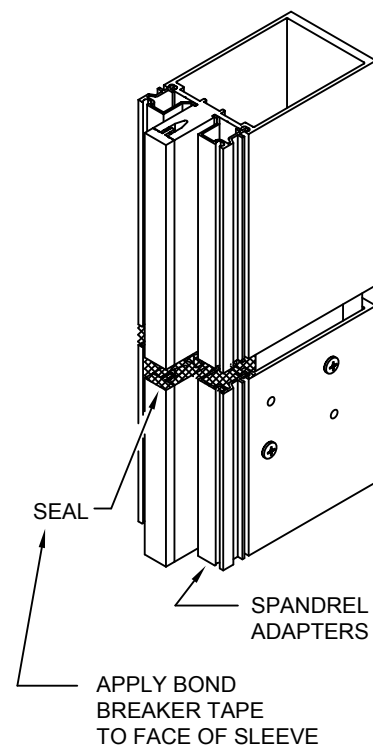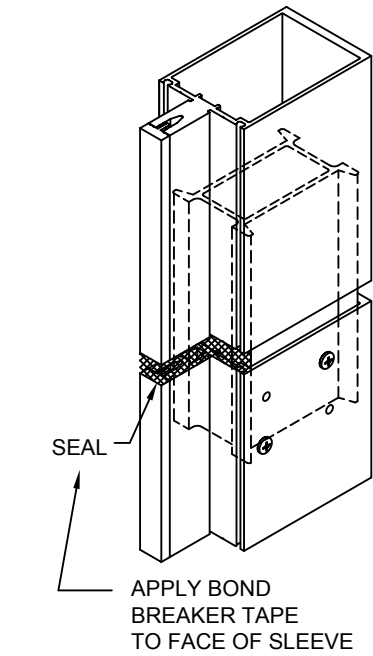

STEP - 11 SEAL INTERIOR OF
VERTICAL SPLICE
JOINTS

ALL SURFACES AND GROOVES MUST BE CLEANED PER THE SEALANT MANUFACTURER'S RECOMMENDATIONS.

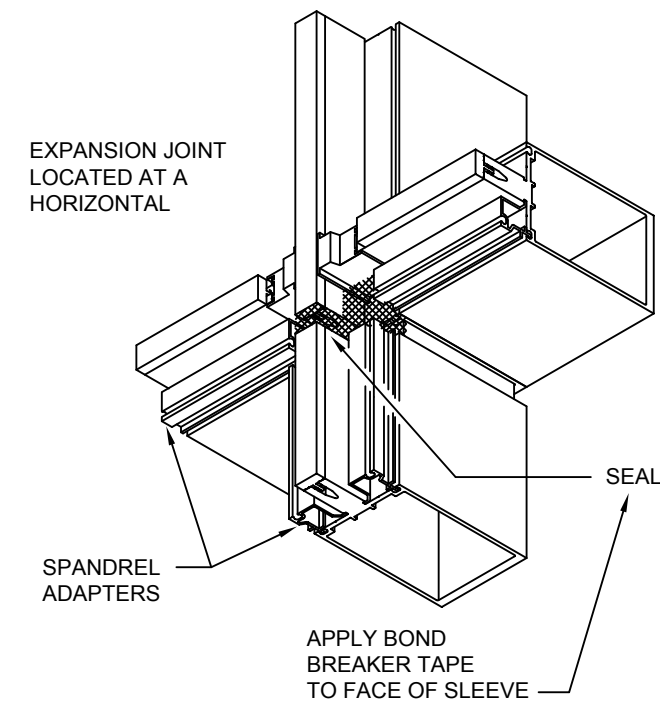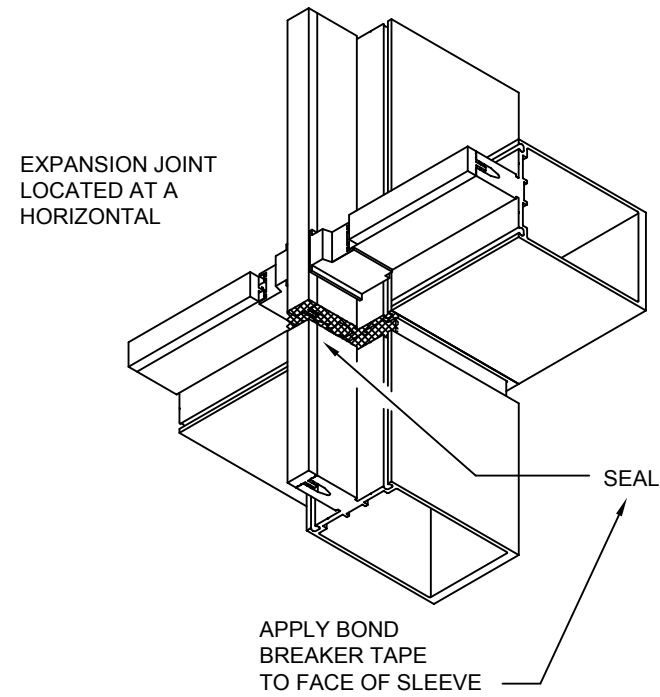

KAWNEER
1600 SYSTEM¹
INSTALLATION INSTRUCTIONS

PART NO.
162-970 5 OF 9

95449-68
08/17/07

DRAWING:

ORDER:

SHT:

STEP - 12 INSTALL INTERIOR GLAZING GASKETS

GASKETS SHOULD BE INSTALLED JUST PRIOR TO GLASS TO AVOID CONTAMINATION BY JOB SITE DEBRIS. GASKET GROOVES AND POCKETS SHOULD BE CLEAN.


IN TEMPERATURES COLDER THAN 50° F ARRANGEMENTS SHOULD BE MADE TO WARM GASKETS BEFORE INSTALLATION. THIS WILL PREVENT EXCESSIVE GLAZING PRESSURE ON THE GLASS DUE TO COLD, STIFF RUBBER GASKETS.

GASKETS CAN BECOME DEFORMED DURING STORAGE IN CARTONS. THEY SHOULD BE REMOVED FROM CARTONS SEVERAL HOURS PRIOR TO GLAZING AND LAID FLAT OR HUNG TO ALLOW RECOVERY OF CORRECT SHAPE. TEMPERATURES SHOULD BE AT LEAST 50° F TO ALLOW THIS.


GASKET INSTALLED LENGTH TO BE DAYLITE OPENING. GASKETS TO BE CUT LONG FOR SOME "CROWD-IN". GASKETS SHOULD NEVER BE "STRETCHED TO FIT".

"CROWD-IN" TO BE 1/8" PER FOOT UP TO 5'-0", 3/16" PER FOOT UP TO 8'-0", 1/4" PER FOOT OVER 8'-0".

JUST BEFORE INSTALLING VERTICAL AND HORIZONTAL GASKETS FACE SEAL JOINTS AT ALL 4 CORNERS. ALSO SEAL SCREW HEAD AT TOP HALF OF HORIZONTAL

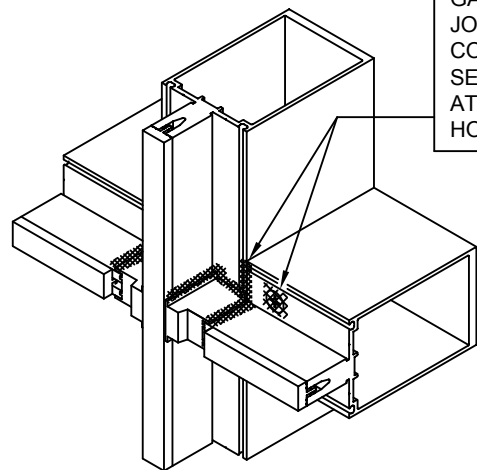


TYPICAL

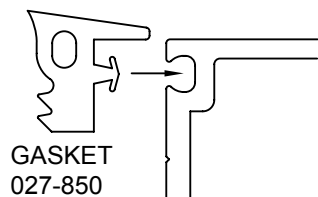




GASKET 027-850

PERIMETER WHERE APPLICABLE

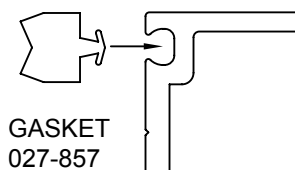


GASKET 027-857

STEP - 12 INSTALL INTERIOR GLAZING GASKETS

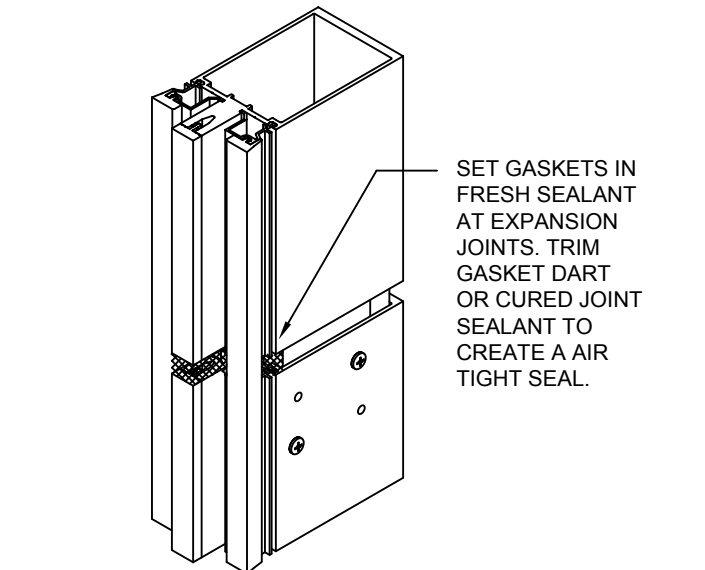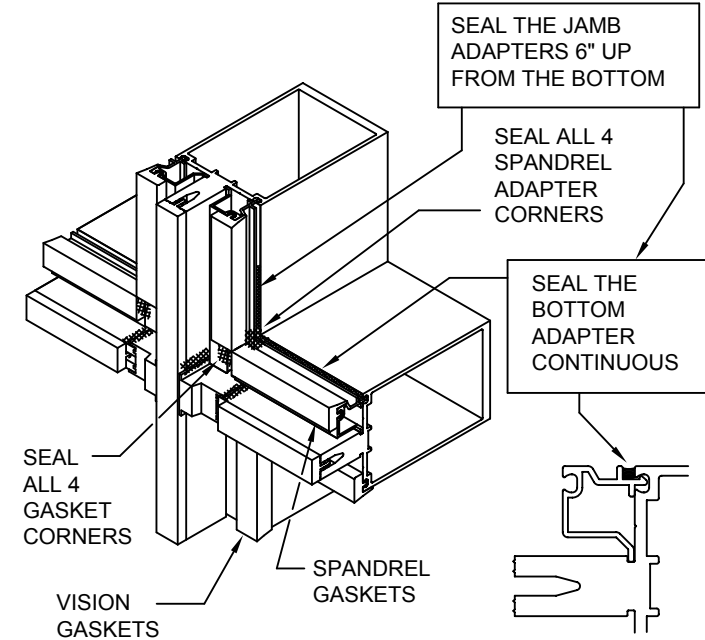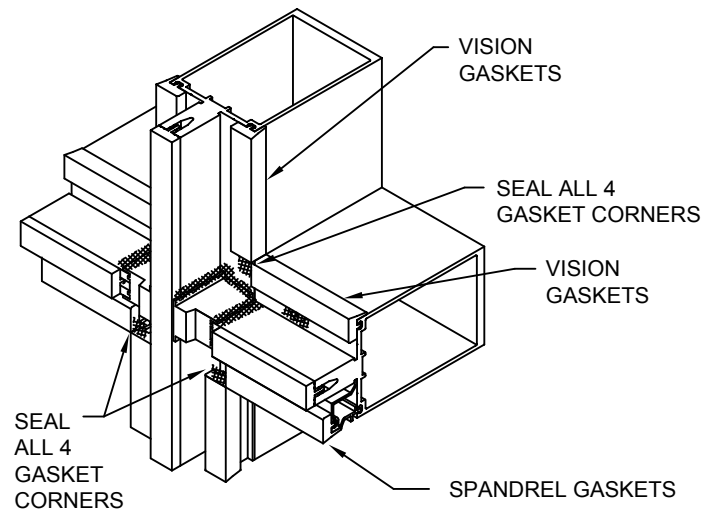


STEP - 13 INSTALL SETTING BLOCKS

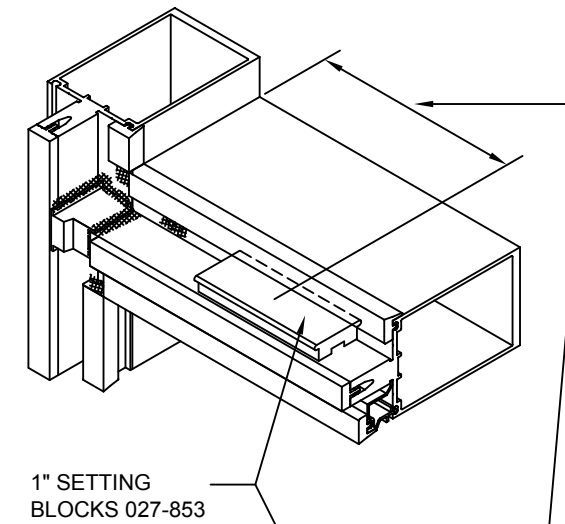

1" SETTING BLOCKS 027-853

LOCATE SETTING BLOCKS PER APPROVED SHOP DRAWINGS OR DEADLOAD CHARTS

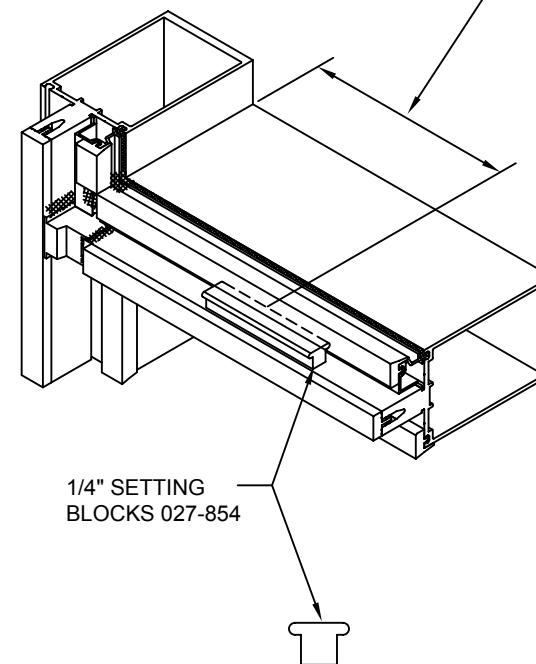


1/4" SETTING BLOCKS 027-854

STEP - 14 INSTALL EXTERIOR GASKETS INTO PRESSURE PLATES


REFERENCE GASKET NOTES IN STEP 12 SAME NOTES APPLY.

REFERENCE INSTRUCTIONS 162-983 FOR EXTERIOR FRAME PERIMETERS

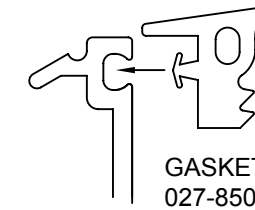


GASKET 027-850

VERTICAL GASKETS ARE TO RUN CONTINUOUS EXCEPT AT HEAD AND SILL CONDITIONS THE GASKET IS TO BE CUT 1/2" SHORT THIS IS FOR THE SEAL AT SECTION D-D STEP 17 - SHEET # 8

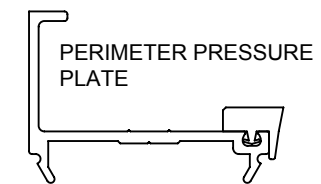


PERIMETER PRESSURE PLATE

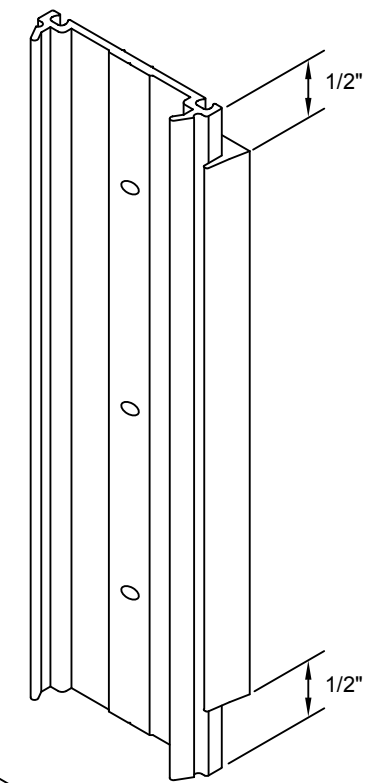

HORIZONTAL GASKET TO BE SAME LENGTH AS PRESSURE PLATE.

PERIMETER WHERE APPLICABLE

GASKET 027-857 AT ONE SIDE. DO NOT CUT 1/2" SHORT.



1600 SYSTEM¹
INSTALLATION INSTRUCTIONS

PART NO. 162-970 6 OF 9


95449-68
08/17/07

DRAWING:



ORDER:

SHT:

STEP - 15 INSTALL GLASS

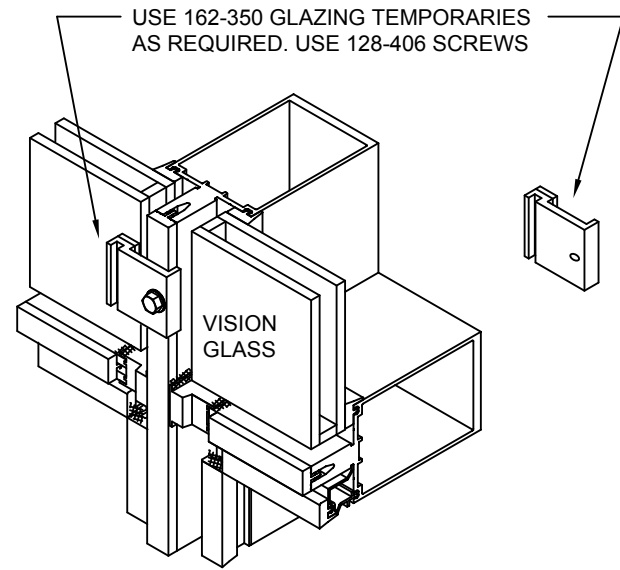


MAXIMUM TEMPORARY SPACING IS 30". IF WINDS GREATER THAN 50 MPH (80KPH) ARE EXPECTED, ADDITIONAL TEMPORARIES MAY BE REQUIRED. CONSULT YOUR SEALANT AND/OR INFILL SUPPLIER FOR SPACING RECOMMENDATIONS. INSTALL PRESSURE PLATES WHERE POSSIBLE.

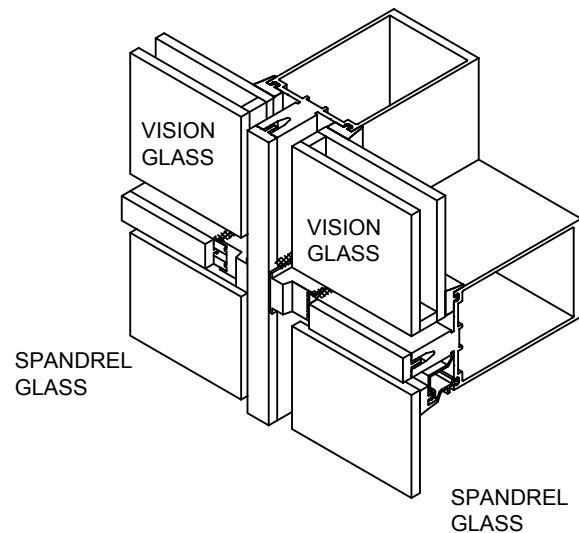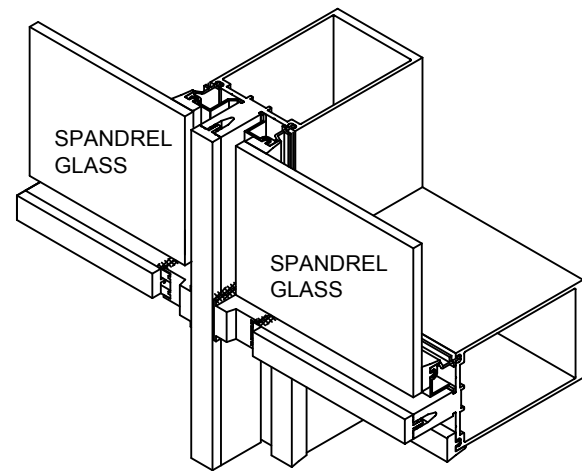

STEP - 16 INSTALL GLASS

SIDE BLOCKS

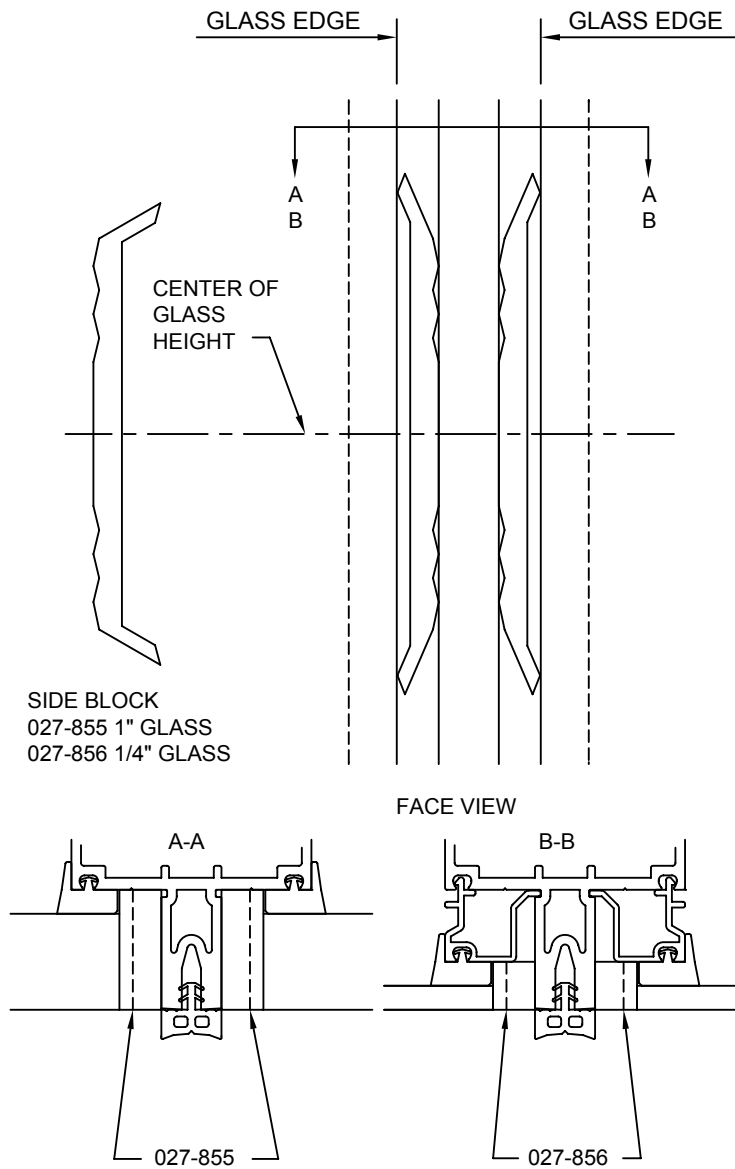

INSTALL SIDE BLOCKS COMPRESSING AS SHOWN


STEP - 17 INSTALL EXTERIOR PRESSURE PLATES



RECOMMEND USING TORQUE LIMIT TOOL 162-399 SEE NOTE.

HOW TO SET TORQUE LIMIT

1. ATTACH ANY CALIBRATED TORQUE INDICATOR TO OUTPUT STUB (1) AND DETERMINE PRESENT TORQUE SETTING WHILE HOLDING THE BODY (5), OR VICE-VERSA.
2. REMOVE SNAP RING (2) AND LOCKING PLATE (3).
3. ADJUST NUT (4) WITH OPEN-END WRENCH : CLOCKWISE TO INCREASE TORQUE, COUNTER- CLOCKWISE TO DECREASE TORQUE.
4. OBTAIN NEW TORQUE READING WITH THE CALIBRATED TORQUE INDICATOR. REPEAT PRECEDING STEP IF MORE ADJUSTMENT IS NECESSARY TO REACH DESIRED LIMIT.
5. REPLACE LOCKING PLATE INTO NOTCHES AND INSTALL SNAP RING. IF LOCKING PLATE DOES NOT "SEAT", MOVE THE ADJUSTING NUT SLIGHTLY UNTIL IT DROPS IN PLACE. THE DIRECTION IS BEST DETERMINED BY WHETHER A MINIMUM TORQUE APPLICATION OR A MAXIMUM ONE IS DESIRED.

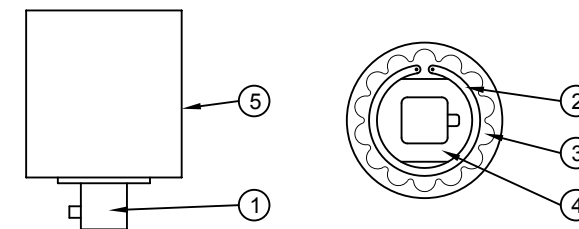


INSTALL PRESSURE PLATES USING SCREWS 128-406 1/4-14 X 1" HEX WASHER HEAD TYPE AB.

SCREWS ARE TO BE LOCATED 9" ON CENTER. ALWAYS LOCATE A SCREW AS CLOSE AS POSSIBLE TO A HORIZONTAL JOINT. THIS WILL PROVIDE MAXIMUM PRESSURE FOR THE CRITICAL JOINT SEALS.

INSTALL HORIZONTAL PRESSURE PLATES WITH WEEP HOLES TOWARDS TOP OF HORIZONTAL.



AT EACH HORIZONTAL AND VERTICAL PRESSURE PLATE INSTALL TWO SCREWS PART WAY, THEN INSTALL THE THIRD SCREW ALL THE WAY, AND THEN TIGHTEN THE FIRST TWO SCREWS. THIS ELIMINATES LATERAL WALKING OF THE PRESSURE PLATE POSITION.

TORQUE ALL SCREWS TO 95 TO 100 INCH POUNDS. DURING COLD WEATHER, TORQUE SCREWS TO 50 INCH POUNDS UNTIL ALL 4 SIDES HAVE BEEN CLAMPED. THEN TORQUE SCREWS TO 95 TO 100 INCH POUNDS.

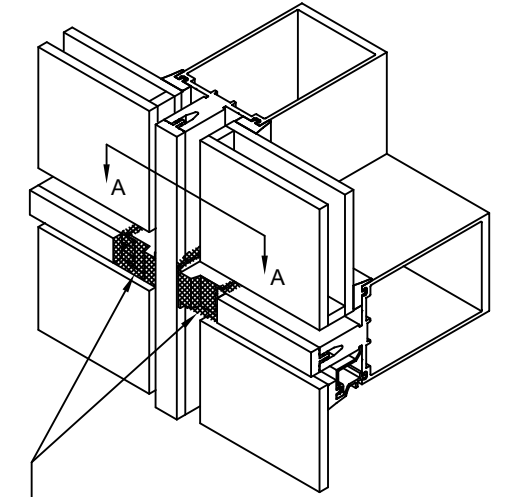

JUST BEFORE INSTALLING VERTICAL PRESSURE PLATES APPLY A GENEROUS AMOUNT OF SEALANT TO THE JOINT PLUG FACE FILLING JOINTS AS SHOWN.

CLEAN JOINT PER SEALANT MANUFACTURER'S RECOMMENDATIONS

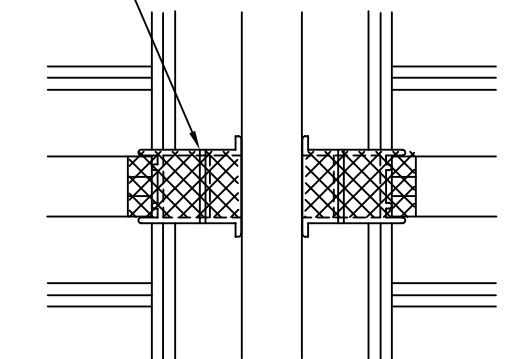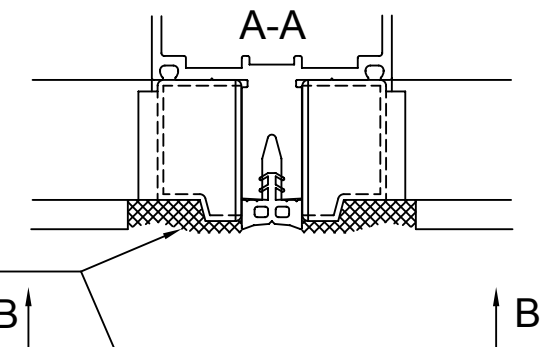

B-B



1600 SYSTEM¹
INSTALLATION INSTRUCTIONS

PART NUMBER
162-970 7 OF 9

95449-68
08/17/07

DRAWING:

ORDER:


SHT:

STEP - 17 INSTALL EXTERIOR PRESSURE PLATES

INSTALL VERTICAL PRESSURE PLATES

NOTE - THE TORQUE LIMIT TOOL WAS DESIGNED TO BE USED WITH A HAND DRIVEN DEVICE. THE TOOL CAN BE ADAPTED TO A DRILL MOTOR IF USED AT A MAXIMUM SPEED OF APPROX. 300 RPM. HIGHER SPEEDS CAN CAUSE OVERHEATING AND AFFECT THE ACCURACY. AFTER APPROX. 1 HOUR OF TOOL USAGE CHECK TORQUE SETTINGS WITH A TORQUE WRENCH.


INTERMEDIATE HORIZONTAL VISION OVER SPANDREL

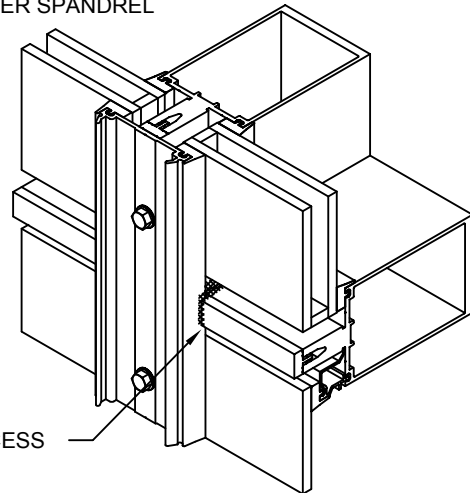

TOOL EXCESS SEALANT

HEAD CONDITION SILL SAME

VERTICAL GASKET STOPS 1/2" SHORT AT HEAD AND SILL CONDITIONS

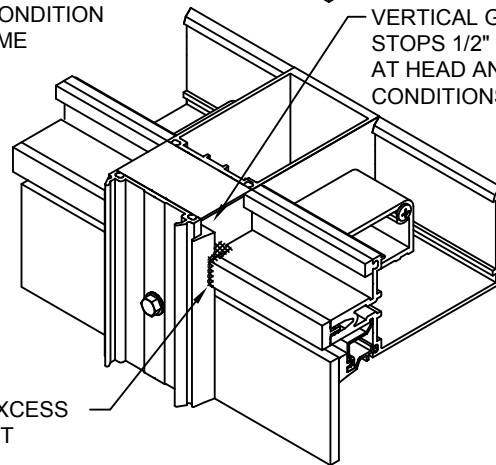


TOOL EXCESS SEALANT

PERIMETER FILLER

HEAD CONDITION SILL SAME

VERTICAL GASKET STOPS 1/2" SHORT AT HEAD AND SILL CONDITIONS

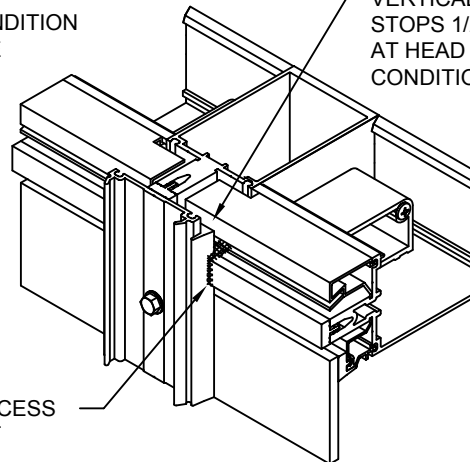


TOOL EXCESS SEALANT

INSTALL VERTICAL PRESSURE PLATES


VERTICAL EXPANSION JOINTS

TOP OF VERTICAL MULLION TO TOP OF PRESSURE PLATE IS 1-1/2"

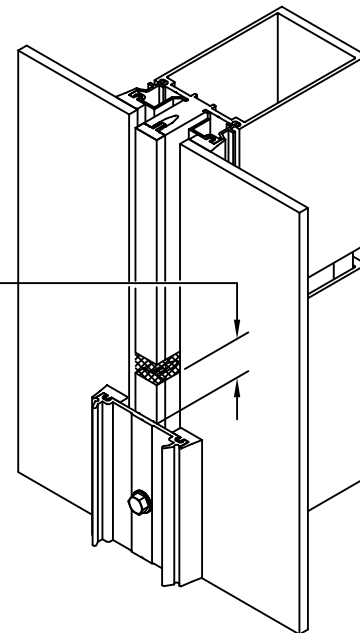

AT TOP PRESSURE PLATE LOCATE SCREW CLOSE TO THE MULLION JOINT BUT NOT BELOW THE JOINT.


CLEAN JOINT PER SEALANT MANUFACTURER'S RECOMMENDATIONS

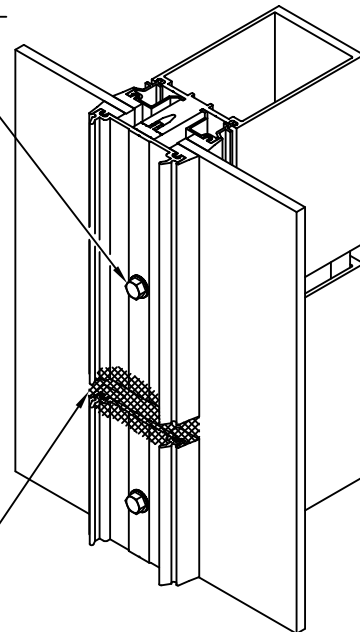

COMPLETELY SEAL JOINT. DO NOT LET SEALANT INTERFERE WITH COVER SNAP. OVERLAP PRESSURE PLATE FACE CREATING A BAND-AID SEAL.


INSTALL HORIZONTAL PRESSURE PLATES

CENTER HORIZONTAL PRESSURE PLATES SO END GAPS ARE EQUAL.

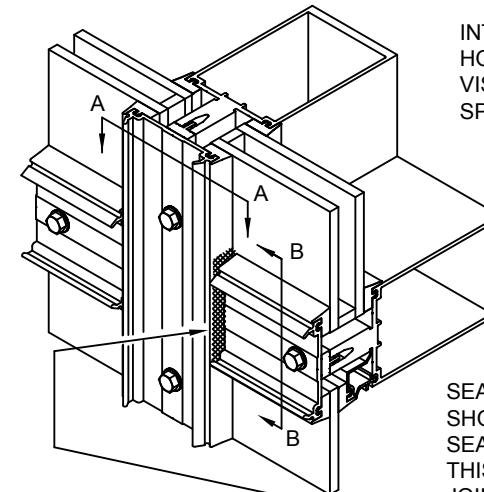


INTERMEDIATE HORIZONTAL VISION OVER SPANDREL

SEAL JOINTS AS SHOWN. TOOL SEALANT. THIS SEAL IS TO JOIN AND ADHERE TO THE JOINT PLUG SEALS.

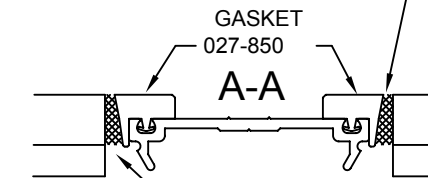

CLEAN JOINT PER SEALANT MANUFACTURER'S RECOMMENDATIONS


DO NOT LET THE SEAL INTERFERE WITH THE COVER SNAP.

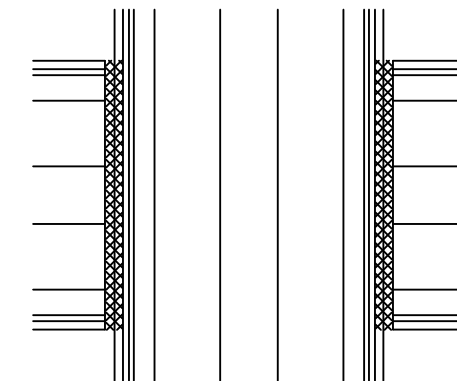

FACE VIEW

PERIMETER FILLER

HEAD HORIZONTAL SILL SAME

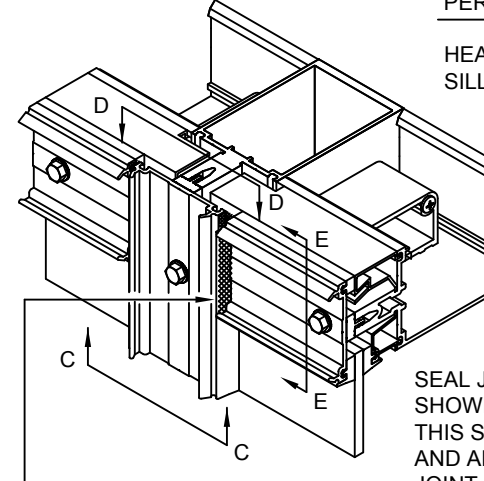


SEAL JOINTS AS SHOWN. TOOL SEALANT. THIS SEAL IS TO JOIN AND ADHERE TO THE JOINT PLUG SEALS.


REFERENCE INSTRUCTIONS 162- 983 FOR EXTERIOR FRAME PERIMETERS

SEAL BETWEEN PRESSURE PLATE AND HEAD/SILL END CAP AS SHOWN.

HEAD HORIZONTAL SILL SAME

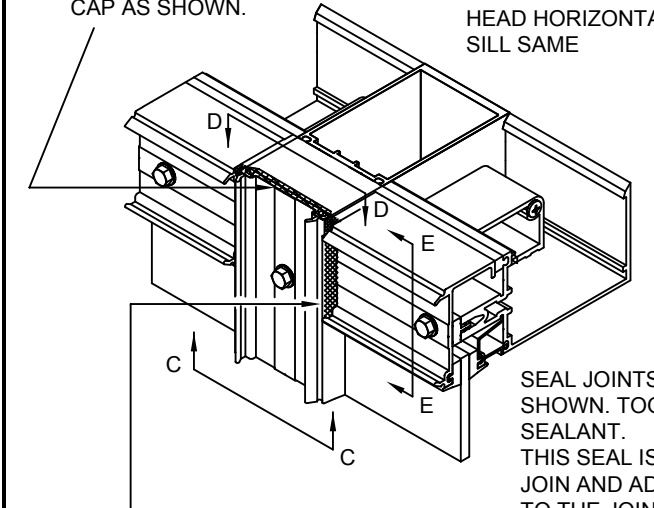


SEAL JOINTS AS SHOWN. TOOL SEALANT. THIS SEAL IS TO JOIN AND ADHERE TO THE JOINT PLUG SEALS.

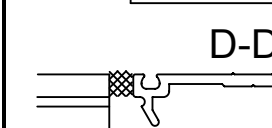

CLEAN JOINT PER SEALANT MANUFACTURER'S RECOMMENDATIONS


VERTICAL GASKET STOPS 1/2" SHORT OF END.

DO NOT LET THE SEAL INTERFERE WITH THE COVER SNAP.

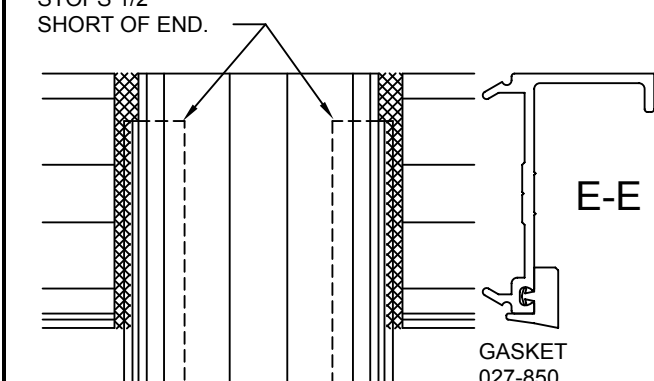

FACE VIEW

DO NOT LET THE SEAL INTERFERE WITH THE COVER SNAP.

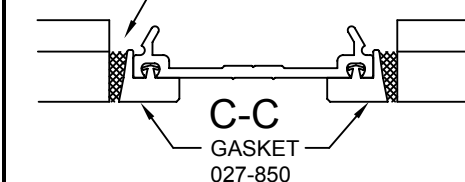

KAWNEER

1600 SYSTEM¹
INSTALLATION INSTRUCTIONS

PART NUMBER
162-970 8 OF 9

95449-68
08/17/07


DRAWING:

ORDER:

SHT:


STEP - 18 INSTALL PERIMETER SEALS

PERIMETER WEATHER SEALS ARE INSTALLED AT THE PRESSURE PLATE LOCATION AS DETAILED BELOW. (THIS SEAL SHOULD BE INSTALLED BEFORE COVERS ARE APPLIED WHEN COVERS DEEPER THAN 3/4" ARE USED) EXTERIOR COSMETIC SEALS AT THE COVER MAY BE APPLIED AT THE HEAD AND JAMBS ONLY. SILL COVERS MUST REMAIN OPEN TO ALLOW WATER DRAINAGE TO THE EXTERIOR.

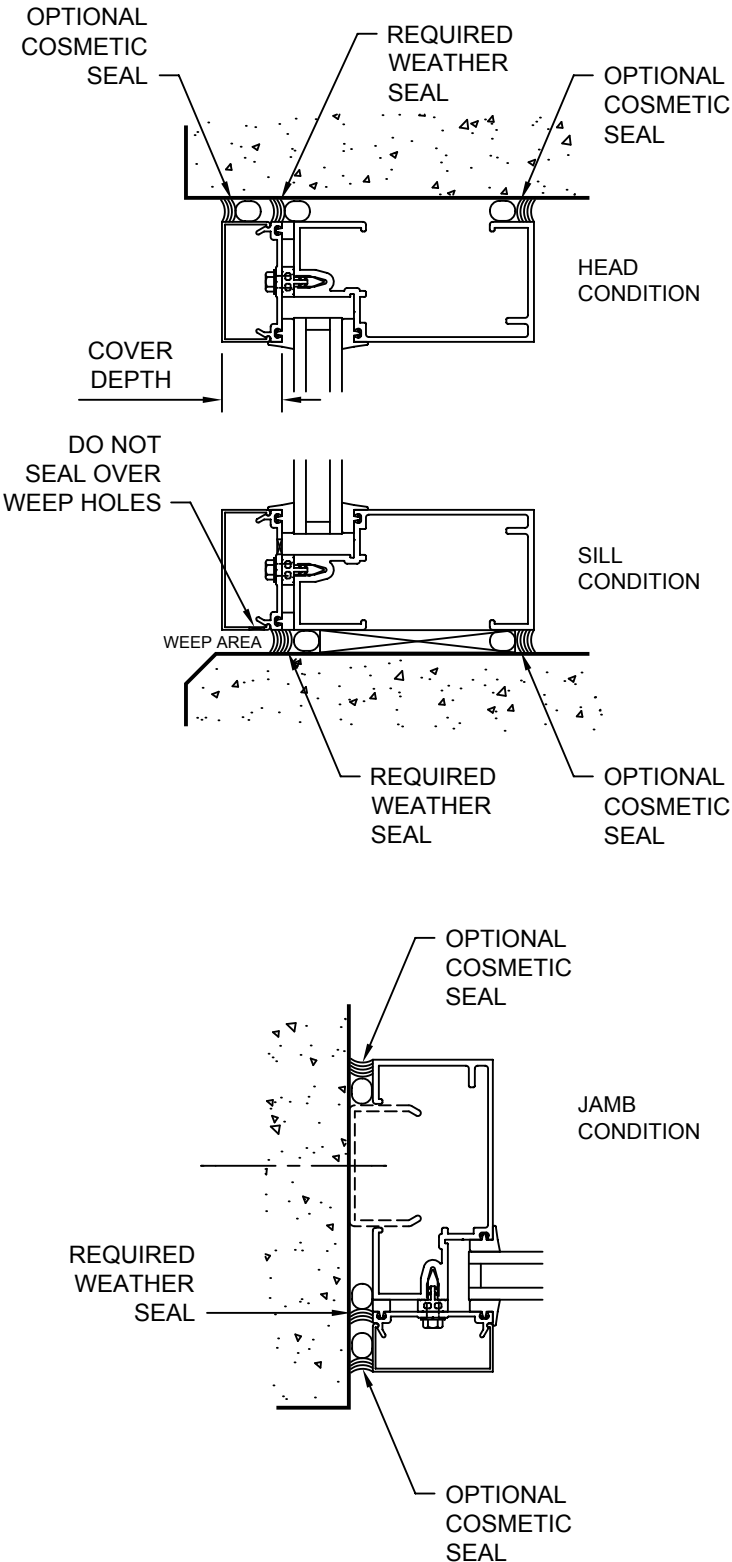


STEP - 19 INSTALL EXTERIOR COVERS

CARE MUST BE TAKEN TO AVOID DAMAGE TO COVERS DURING INSTALLATION. USE A 18" LONG PIECE OF 2 X 4 WOOD ALONG WITH A HAMMER OR Mallet TO SEAT THE COVER.

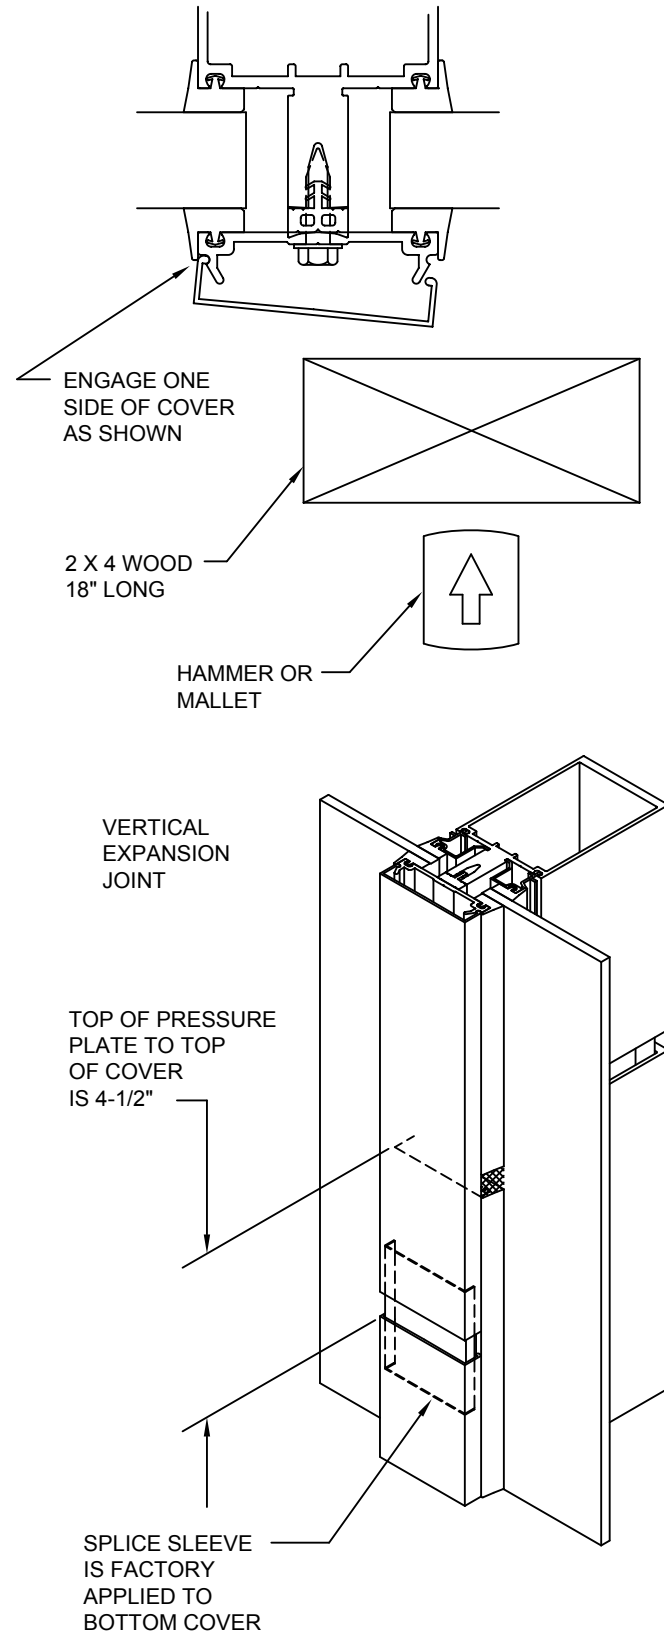


STEP - 19 INSTALL EXTERIOR COVERS

PINNING OF ALL VERTICAL COVERS IS REQUIRED FOR BOTH SIDES. DRILL A .106 DIA. HOLE (#36 DRILL) AND INSTALL 128-920 SCREWS #6 X 3/8" PAN HEAD TYPE B. LOCATE PINNING AT A HORIZONTAL CLOSEST TO THE COVER HEIGHT CENTER.

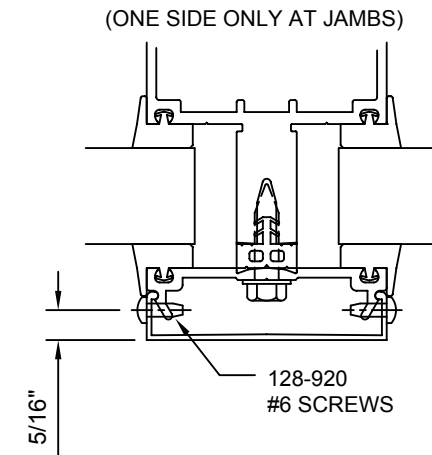


NOTE FOR 5" SIGHTLINE COVERS
DUE TO LARGE EXTRUSION TOLERANCES, 5" SIGHTLINE COVERS MAY REQUIRE SEALANT OR PINNING TO HOLD IN PLACE.

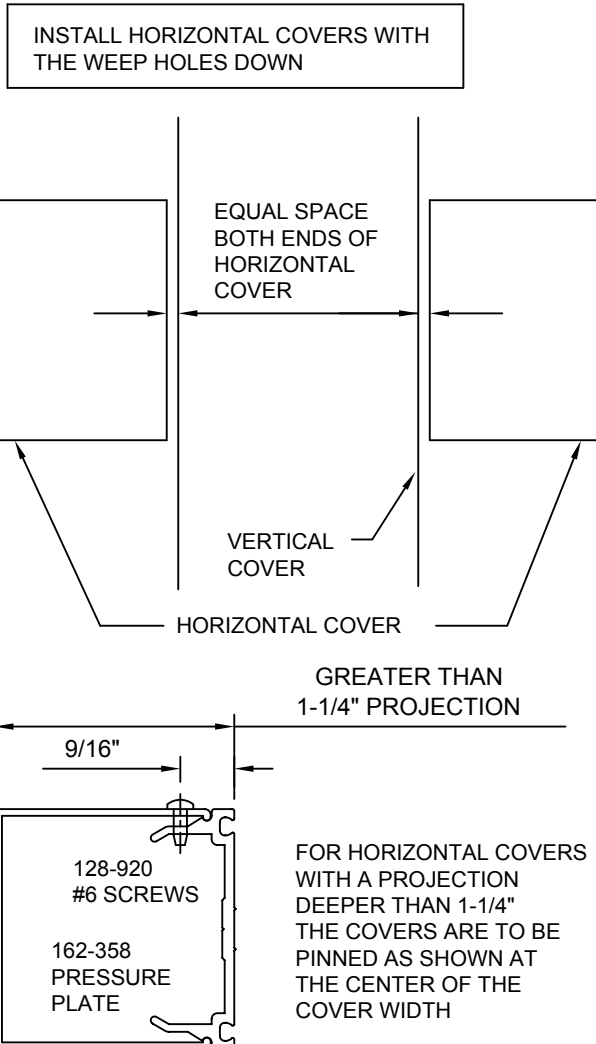

REMOVING COVERS

COVERS CAN BE SAVED IF TOLERANCES ARE NOT TOO TIGHT AND THE COVER IS REMOVED WITH EXTREME CARE

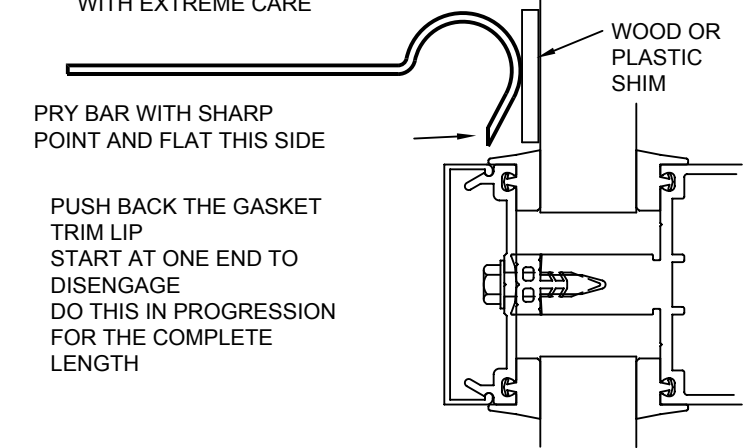

KAWNEER
1600 SYSTEM¹
INSTALLATION INSTRUCTIONS

PART NO.
162-970 9 OF 9

95449-68
08/17/07
DRAWING:
ORDER:
SHT: